

## CT10 Counter/Totalizer

### Wiring instructions for the Absolute Automation CT10 Counter/Totalizer

#### *Optex Wireless 1000 connection*

Connect the two wires to the N/O and COM terminals of the Optex RC-10 Receiver. Polarity does not matter. (see RC-10 instructions for location of output terminals)



#### *AutoAlert , Mier , MURS and Dakota connection*

Connect the two wires to the N/O and COM terminals of the Driveway Alarm Controller. Mier Whistle switch must be off. Polarity does not matter.



#### Model H7EC-N

#### Description:

Totalising counter 48 x 24 mm

Up count

Counting speed 30 cps/1 kcps switchable - 1 kcps

No. of display digits 8 7 4 or 5

Input signal Count, reset Gate/time, reset Encoder/pulse

Features Powered by lithium battery. Displays accumulative time display of RPM or RPS possible

NEMA 4/IP66 protection Remote input start counter Powered by a lithium battery

Replacement battery with 7 year minimum life Powered by a lithium battery NEMA 4/IP66 protection

Dual operation modes NEMA 4/IP66 battery with 7 year minimum life. Replacement battery with 7 year minimum life

Manual or remote reset Multi-function

