



# DAKOTA ALERT

Wireless Alarms & Security Equipment



## CAD-03 Kit GSM Auto Dialer

Owner's Manual





## Warnings:

This device complies with Part 15 of the FCC rules, Operation of this device is subject to the following conditions: 1. This device may not cause harmful interference. 2. This device must accept any interference, including interference that may cause undesired operation.

## Features:

Wireless alarm; no telephone line required, GSM Dialer supports any standard SIM card; programmable entry/exit delay time; two separate dialer alarms, alarm and panic; select up to 9 (32 digit) user programmable phone numbers for each alarm; different 10 second recordable message for each alarm; arm/disarm using keypad or remote keyfob; wireless panic; built-in tamper switch; built-in terminal block for alarm and siren connection; DC adaptor with rechargeable battery back-up; programmable as silent alarm (dialer only) or audible (siren + dialer).

## Contents:

- 1 - GSM Auto Dialer
- 1 - RF PIR Sensor
- 1 - RF Shock Sensor
- 1 - 9V 500mA DC Adaptor
- 1 - Installation & Programming Guide
- 1 - Rechargeable 7.2V Battery





## **IMPORTANT**

### **Before you install the PIR Detectors, please take these points into consideration:**

Don't position the detectors facing windows.

Don't position in direct sunlight.

Don't position above heat sources or in areas of moisture.

Don't let pets roam into the detection area when the system is armed.

The PIR Sensor is set to Alarm 2 so take this into account  
when you are programming your voice messages.

### **Opening the PIR Sensor to access dipswitches and battery connector:**

1. Slide the PIR Sensor off the bracket (use the bracket as a template for mounting.)
2. Using a small standard screwdriver, press the release clip on the bottom of the PIR Sensor.
3. Separate the two parts.





## Installation

**Tools needed:** Small Phillips Screwdriver;  
Large Phillips Screwdriver; Small Standard Screwdriver.

### Set Up:

1. Set PIR, RF Shock Sensor and CAD-03 dipswitches to match. The first five dipswitches on all units (Figure 1 - 1 and Figure 2 - 1) need to be set exactly the same with the last 3 dipswitches on the PIR sensor and RF Shock Sensor set to OFF. (Note: On the PIR and shock sensor, "off" is in the down position. On the Dialer, "off" is in the up position.)

2. Install battery in PIR sensor (Figure 1 - 2) and mount at desired location. (Note: recommended to replace batteries every 6 months.)

3. Remove the battery insulator by pulling black tab from the back of the RF Shock Sensor. Unclip the bracket from the back and mount in desired location.

Figure 1\*


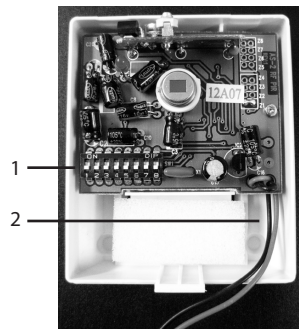


Figure 2\*



\* Pictures shown in white for readability.



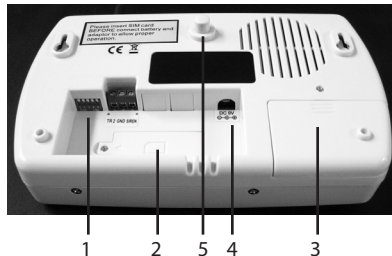

4. Use a small Phillips screwdriver to loosen SIM card cover on dialer (Figure 2 - 2). Lift up on hinges. Slide black cardholder to the left and lift. Insert SIM card into the cardholder with the notch on the top (Figure 3). Close cardholder and slide to the right to lock into place. Close cover and tighten screw.

5. *(Note: Tamper switch (Figure 2-5) arms automatically when depressed and will cause alarm 1 to activate when released. Disarm by entering password code 1234 into dialer followed by the ESC button).* Install the back-up battery (included) into the auto dialer. Use a small Phillips screwdriver to remove screw above battery cover (Figure 2 - 3). Remove cover by sliding downwards. Plug in battery pack making sure not to force onto pins incorrectly. Put battery pack in space provided, close battery cover, and replace the screw. Mount Auto Dialer in desired location. *(Note: if tamper switch is not completely compressed, Auto Dialer will not be able to properly arm. If mounted on an unlevel surface, a wedge may be required behind the unit.)*

6. Continue on to the Advanced Operations to program your dialer or refer to the “CAD-03 Quick Reference Programming” on page 15.

Figure 3\*



\* Pictures shown in white for readability. 5





## Advanced Operations

### HOW TO PROGRAM THE AUTO DIALER

\*If no key is pressed for 30 seconds, the dialer will automatically exit the programming mode.

*Notice: The system must be in the OFF mode for all programming.*

#### How to record the voice messages:

Alarm 1 = Tamper and panic alarm. Alarm 2 = PIR sensors and hard-wired input.

1. Key in the four digit user password code (factory default is 1234.)
2. Press RECORD.
3. Press **1** (to save as the message for alarm 1) or **2** (to save as the message for alarm 2).
4. Press ENTER to start recording your 10 second message.
5. Press ENTER to stop the recording early or wait for the 10 seconds to end.

Quick guide: Press 1 2 3 4 > RECORD > 1 > ENTER, record message now

#### How to play back the message:

Press 1 2 3 4 > PLAY > 1 > ENTER to play back the recorded message.

*(Notice: 1 = the first message, 2 = the second message).*





### How to program phone numbers:

You can enter a maximum of nine telephone numbers for the alarms. Each number can be a maximum of 32 digits.

1. Key in the four digit user password code (factory default is 1234.)
2. Press PROGRAM > 3 > ENTER.
3. The number you press next will select the position in the sequence you want that telephone number to dial (*1 = first number called, 2 = second number called, and so on*).
4. Press ENTER and key in the first telephone number.
5. Press ENTER to exit the programming mode.
6. Repeat the process until you have entered all the numbers you wish the Auto Dialer to call once it has been activated (maximum 9 different numbers.)

Quick guide: Press 1 2 3 4 > PROGRAM > 3 > ENTER > 1 > ENTER > *Telephone #* > ENTER

### How to set Auto Dialer to send Voice or SMS message:

1. Key in the four digit user password code (factory default 1234.)
2. Press PROGRAM > 0 > ENTER > 1 > ENTER.
3. Press *N* (*N = 0 for voice message, 1 for SMS message*). Press ESC.

Quick guide: Press 1 2 3 4 > PROGRAM > 0 > ENTER > 1 > *N* > ESC

### How to program the telephone number for the SMS message:

1. Key in the four digit user password code (factory default 1234.)
2. Press PROGRAM > 9 > ENTER. Key in the telephone number.
3. Press ENTER (*the display screen will show "505" followed by the telephone # keyed in.*)

Quick guide: Press 1 2 3 4 > PROGRAM > 9 > ENTER > *telephone #* > ENTER





### How to delete phone numbers:

1. Key in the four digit user password code (factory default 1234.)
2. Press PROGRAM > 3 > ENTER.
3. Press *N* (*N* = 1 for the first number called; 2 for the second number called; etc.)
3. Press ESC to exit the programming mode.

Quick guide: Press 1 2 3 4 > PROGRAM > 3 > ENTER > *N* > ESC

### How to designate telephone numbers to ALARM 1 and ALARM 2:

1. Key in the four digit user password code (factory default 1234.)
2. Press PROGRAM > 6 > ENTER.
3. Press *X* (*X* = 1 for alarm 1; 2 for alarm 2). Press ENTER.
4. Press *N* (*N* = 1 for first phone number; 2 for second phone number, etc.). Press ENTER.
5. Repeat the process to designate any other numbers to each alarm.

Quick guide: Press 1 2 3 4 > PROGRAM > 6 > ENTER > *X* > ENTER > *N* > ENTER

### How to change the user password code (factory default is 1234):

1. Key in the four digit user password code (factory default 1234.)
2. Press PASSWORD
3. The LCD will change to n-p.
4. Key in your new four digit user password code.
5. The LCD will change to c-p.
6. Key in your new four digit user password code again.
7. The LCD will change to acc.

Quick guide: Press 1 2 3 4 > PASSWORD > *New Code* > *Confirm New Code*





### **How to program the Auto Dialer to give an audible alarm as well as sending a voice message (factory default is alarm ON):**

1. Key in the four digit user password code (factory default 1234.)
2. Press PROGRAM > 1 > ENTER
3. Press *N* (*N* = 0 for without audible alarm, 1 for with audible alarm). Press ENTER.

Quick guide: Press 1 2 3 4 > PROGRAM > 1 > ENTER > *N* > ENTER

### **How to set the time the alarm will sound on activation (default time is 3 minutes):**

1. Key in the four digit user password code (factory default 1234.)
2. Press PROGRAM > 2 > ENTER
3. Press *Time* (*Time* = 1 for one minute, 2 for 2 minutes, etc. up to 99 minutes). Press ENTER.

Quick guide: Press 1 2 3 4 > PROGRAM > 2 > ENTER > *Time* > ENTER

### **How to set Entry/Exit Delay times (default both delay set at 30 seconds):**

The entry/exit times are the times the Auto Dialer gives you to enter/exit the area covered by the system before it arms/alarms. These are pre-set to 30 seconds. You can also change the timing to instant or 60 seconds.

Entry Delay:

1. Key in the four digit user password code (factory default 1234.)
2. Press PROGRAM > 4 > ENTER
3. Press *N* (*N* = 0 for instant; 3 for 30 seconds; 6 for 60 seconds). Press ENTER.

Quick guide: Press 1 2 3 4 > PROGRAM > 4 > ENTER > *N* > ENTER





#### Exit Delay:

1. Key in the four digit user password code (factory default 1234.)
  2. Press PROGRAM > 5 > ENTER
  3. Press *N* (*N* = 0 for instant; 3 for 30 seconds; 6 for 60 seconds; 9 for 90 seconds). Press ENTER.
- Quick guide: Press 1 2 3 4 > PROGRAM > 5 > ENTER > *N* > ENTER

#### **How to set an Entry/Exit delay sound (factory setting Entry/Exit delay with sound):**

1. Key in the four digit user password code (factory default 1234.)
  2. Press PROGRAM > 7 > ENTER
  3. Press *N* (*N* = 0 without sound; 1 with sound). Press ENTER.
- Quick guide: Press 1 2 3 4 > PROGRAM > 7 > ENTER > *N* > ENTER

#### **How to disable Tamper Function (factory setting Tamper ON):**

1. Key in the four digit user password code (factory default 1234.)
  2. Press PROGRAM > 8 > ENTER
  3. Press *N* (*N* = 0 without tamper function; 1 with tamper function). Press ENTER.
- Quick guide: Press 1 2 3 4 > PROGRAM > 8 > ENTER > *N* > ENTER

**How to program monthly self-test:** *(Most SIM cards will be disabled if they are inactive for too long. To stop this from happening, enable the self test in which the dialer will call and give an audible beep once a month.)*

1. Key in the four digit user password code (factory default 1234.)
  2. Press PROGRAM > 0 > ENTER > 2 > ENTER
  3. Press *N* (*N* = 0 to enable test; 1 to disable test). Press ENTER.
- Quick guide: Press 1 2 3 4 > PROGRAM > 0 > ENTER > 2 > ENTER > *N* > ENTER

10





## HOW TO OPERATE THE AUTO DIALER

### How to Arm the Alarm System/Turn the Dialer ON:

1. Check that the voice message and at least one phone number has been programmed into the Auto Dialer.
2. Press 1 2 3 4 > ENTER. The Auto Dialer will show 'ON' on the display.
3. The alarms will become active after the delay time you have set has expired.

Quick guide: Press 1 2 3 4 > ENTER

### How to disarm the Alarm System/Turn Dialer OFF:

To disarm the Alarm System or to stop the Dialer from dialing out after either the tamper switch (if connected and active) or a alarm input has been activated, key in the four digit user password code followed by ESC. The Auto Dialer will revert to the 'OFF' mode and must be re-set to the 'ON' mode as above.

Quick guide: Press 1 2 3 4 > ESC



### **How to stop the Dialer from dialing the telephone numbers in sequence:**

When the Auto Dialer starts dialing, it will dial the first telephone number and repeat the pre-recorded voice message for 1 minute. If there is no response from the phone, then it will hang up and dial the next number until all the programmed numbers for that alarm are dialed. It will repeat this dial sequence three times and display 'NO ANSWER' if there is no response from any of the phone numbers. To stop this dial sequence, press the \* key on the telephone keypad that is receiving the call. At that time, the Auto Dialer will stop its dialing sequence and the alarm (if programmed) will stop. If the local alarm has been programmed as active, then pressing the # key will stop the dialing sequence, but the alarm will continue to sound until timed out. In both cases, the Auto Dialer will remain ON, waiting for any further alarm.

Quick guide: Answer the phone and press # or \* to stop dialing sequence.

### **How to change the back-up battery:**

Important: It is recommended to change the back-up battery at least once a year, even if the battery is not low.

1. First make sure that the Auto Dialer is OFF. Then release it from the wall.
2. Remove the battery door and take out the old battery. Insert new 7.2V rechargeable battery pack and make sure it is in the correct polarity.
3. Fit the battery door and mount the Auto Dialer back onto the wall.





## **IMPORTANT: SIM Card**

Most pay-as-you-go SIM cards will need to be topped up during the first 3 months of use. If you do not carry this out, some service providers switch off the SIM card. We recommend that you alarm the unit as a test every four weeks, just to be sure the SIM card is still operating.

If the SIM card is pin protected, you will have to enter the pin number when you first power the system up. You will have to enter the correct pin number within 3 attempts, otherwise the SIM card will lock out and you will need to request a PUK number from your service provider.

Please contact SIM card service provider (AT&T, T-Mobile, RebelFone, O<sup>2</sup>Wireless, etc.) with questions regarding SIM cards. Services may be limited by your local provider. Please contact them regarding local limitations.

## **HOW TO RESET THE AUTO DIALER**

### **Inside the battery compartment:**

Remove the power supply and the Auto Dialer from the wall. Remove the 7.2V battery. Then remove the SIM card. Inside the battery compartment is a switch. Move it to the ERASE position. Connect the power to the Auto Dialer then press DELETE twice. There will be 2 short beeps from the Auto Dialer. Switch the power off again. Replace the SIM card, place switch back to NORMAL. Replace the 7.2V battery and place back onto the wall. Power the Auto Dialer back up. The Auto Dialer will then return to factory default setting.





### **NOTE AND CAUTION:**

A leaking battery will result in poor performance and could damage the system. It is recommended that the batteries be periodically checked. Change the batteries at least once a year to maintain the system.

DO NOT mount the Auto Dialer in areas that are exposed to extreme heat or moisture, as this could adversely affect the performance of the system.

Use only a damp cloth and general household cleaning agent to wipe the unit clean. DO NOT use turpentine, thinner, gasoline or similar substances to clean the unit.

**TECHNICAL SUPPORT:** If you encounter any difficulty in the operation of this product after reading the manual, please contact us. You can reach us by phone at 605-356-2772 from 8:30 AM to 5:00 PM Monday through Friday (Central Standard Time). We will be happy to answer your questions and help you in any way we can.

**WARRANTY:** Dakota Alert warrants this product to be free of defects in material and workmanship for a period of one year from the date of purchase. This warranty does not cover damage resulting from accident, abuse, act of God or improper operation. If this product does become defective, simply return it to Dakota Alert. Please include a note describing the troubles along with your name and return address as well as the original sales receipt. If the product is covered under warranty it will be repaired or replaced at no charge. If it is not covered by warranty, you will be notified of any charges before work is done.





### **CAD-03 Quick Reference Programming** *(For step-by-step programming, refer to pages 6-10)*

**Programming:** Enter Pass code 1234; push the Program button; select option number;

0/1 - Voice or SMS Message (N = 0-Voice; 1-SMS) 1234>PROGRAM>0>ENTER>1>ENTER>N>ESC

0/2 - Monthly Self-Test (N = 0-ON; 1-OFF) 1234>PROGRAM>0>ENTER>2>ENTER>N>ENTER

1 - Audible Alarm (N = 1-Audible; 0-Silent) 1234>PROGRAM>1>ENTER>N>ENTER

2 - Length of Audible Alarm (N = 1-99 Mins) 1234>PROGRAM>2>ENTER>N>ENTER

3 - Add Numbers (N = 1-9 *order in which numbers are dialed*)

1234>PROGRAM>3>ENTER>N>ENTER>PHONE NUMBER>ENTER

Delete Numbers (N = 1-9 *order in which numbers are dialed*)

1234>PROGRAM>3>ENTER>N>ESC

4 - Entry Delay (N = 0 for instant; 3 for 30 secs; 6 for 60 secs; 9 for 90 secs)

1234>PROGRAM>5>ENTER>N>ENTER

5 - Exit Time (N = 0 for instant; 3 for 30 secs; 6 for 60 secs) 1234>PROGRAM>4>ENTER>N>ENTER

6 - Designate phone numbers to alarms (X = 1 for Alarm 1; 2 for Alarm 2.

N = 1-9 *order in which numbers are dialed*) 1234>PROGRAM>6>ENTER>X>ENTER>N>ENTER

7 - Entrance/Exit Delay Sound (N = 1-Sound; 0-Silent) 1234>PROGRAM>7>ENTER>N>ENTER

8 - Tamper switch on/off (N = 1-On; 0-Off) 1234>PROGRAM>8>ENTER>N>ENTER

9 - Program SMS Number 1234>PROGRAM>9>PHONE NUMBER>N>ENTER

**Recording alarm message:** 1234>RECORD>N>ENTER>*record message now*

(N = 1-Alarm 1 message; 2-Alarm 2 message)

**Playing alarm message:** 1234>PLAY>N>ENTER

(N = 1-Alarm 1 message; 2-Alarm 2 message)





# **Dakota Alert, Inc.**

32556 E. Main Street  
P0 Box 130  
Elk Point, SD 57025

Phone: (605) 356-2772

Fax: (605) 356-3662

Web: [www.dakotaalert.com](http://www.dakotaalert.com)

