



FloTrol System Overview V1.1

GF1090



www.PipeBurstPro.com

(800) 246-LEAK (5325)

Congratulations on the purchase of your new PipeBurst Pro Jr. Flood Control System!

Please visit www.PipeBurstPro.com for new components, features, tips and tricks and troubleshooting information.

FloTrol Overview

1.1. Component Description



- a. The FloTrol is an optional hardwired remote control switch used to operate the TickerValve and indicate the system state with two LEDs and an audible alarm. While the exterior appearance of the FloTrol looks similar to the VIP Jr. the interior components are different inside.

1.2. Installation

- a. Remove the four screws and the back cover from the FloTrol.
- b. Remove the necessary knockout slots with the utility knife and feed the CAT3 or CAT5 (not included) solid strand control wire through to the "FLOTROL" terminal block. 5 wires are required to make the necessary connections.
- c. Connect the control wire to the "FLOTROL" terminal block on both the VIP Jr. and FloTrol circuit boards. Terminals 1 through 5 must be connected. Wire terminal 1 to 1, 2 to 2, 3 to 3, 4 to 4, and 5 to 5. Terminal 6 is not in use
- d. Use the open holes located on the left and right side of the case to mount the FloTrol.

Note: Hardware not included

1.3. Button Function

- a.  WATER ON / OFF: Press  to manually open and close the TickerValve.

1.4. System Condition

WATER ON	Green LED
WATER OFF	Red LED
WATER DETECTED	Red LED and Audible Alarm

Warranty - PipeBurst Pro Products 7 Year Limited Warranty: GreenField Direct, LLC of 14015 238th St, Greenwood, NE 68366 ("Warrantor"), warrants to the original purchaser and installed location of the PipeBurst Pro, manufactured by Warrantor, and to any person to whom such originally installed equipment is transferred to via the transfer of said real property that original installation was made, that such equipment shall be free from defects in materials and workmanship during a two (2) year period; additionally the electric valve actuator enclosure and its' electronic components inside, shall be free from interior moisture damage for a period of seven (7) years; both periods commencing upon the receipt of order date for such equipment from the original purchaser thereof; (the "warranty periods").

Note: Full warranty details can be found at <http://www.pipeburstpro.com/pdf/Warranty.pdf>

FCC Disclaimer: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna; Increase the separation between the equipment and receiver; Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.; Consult the dealer or an experienced radio/TV technician for help.; Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.